

Magnetic Patio Door 120 x 215

1. Make sure the door frame is clean.
2. Attach the top of the screen to the door frame with the hook and loop tape, or if it is wood use the supplied tacks
3. Attach the sides of the screen to the door frame with the hook and loop tape, or if it is wood use the supplied tacks
4. Fold over any excess material, or remove if you wish, but avoid cutting the join at the top. (Please note that the material can be ironed, please make sure the iron is set on a warm temperature)
5. Cut the top rod (if ordered) to the required length, if necessary
6. You can trap the screen material in the top rod by pulling out the dowel and then pushing it back in place.
7. Put the top rod in position either with the supplied hook and loop tape, or with the supplied self tapping screws,

