 


For a neat finish this can be ironed on a low setting with a cotton tea towel between the screen and iron. Make sure the door frame is clean and dry.



## Magnetic adjustable Door Screen up to 2.0m wide x 210cm high

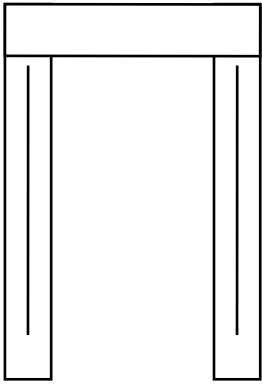

1. Fit the flat self adhesive magnetic tape to either side of the door frame, you may need to cut to length.

5. Secure the material on each side with the profile and magnet to hold them in place. It should be taut not baggy, but the middle magnet should stay joined together.



2. Ensure that the magnets on the door screen are joined together. Attach the screen to the top of the door frame with the supplied hook and loop tape. To adjust the height you may need to fold the screen over at the top, stitch, glue or tape it in position, or use the top rod see below. The centre join should be slightly higher than either end.




6. Walk through the screen several times from both sides. The screen should join together easily. Please be aware that a lip or door frame may prevent connection right at the bottom.



3. Make sure that the screen is just above or just brushes the floor.



7. When you are happy, then cut to size. Tuck under the magnets on either side. Can be hemmed.

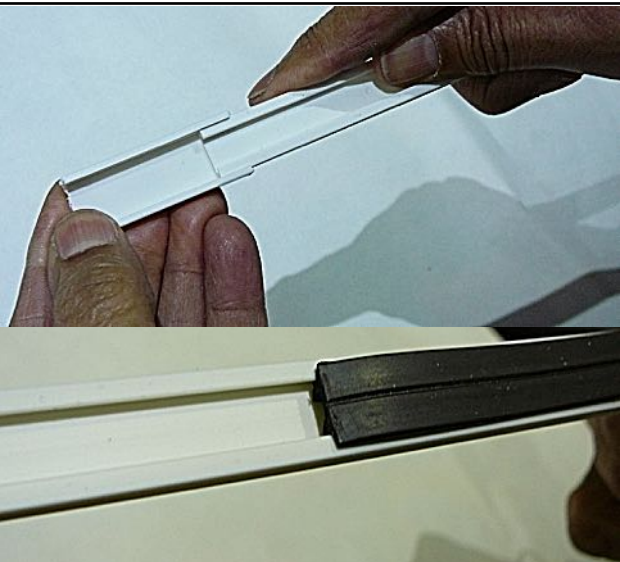

4. Connect the plastic profiles together on each side by sliding or pressing on the joining pieces. You may need to cut to length



**Top Rod:** If you have ordered one use it to clip the top of the screen and adjust the height. You can fix with hook and loop tape or supplied screws. You may have to cut to size.