


# SLIDING DOOR CONSTRUCTION SUGGESTIONS

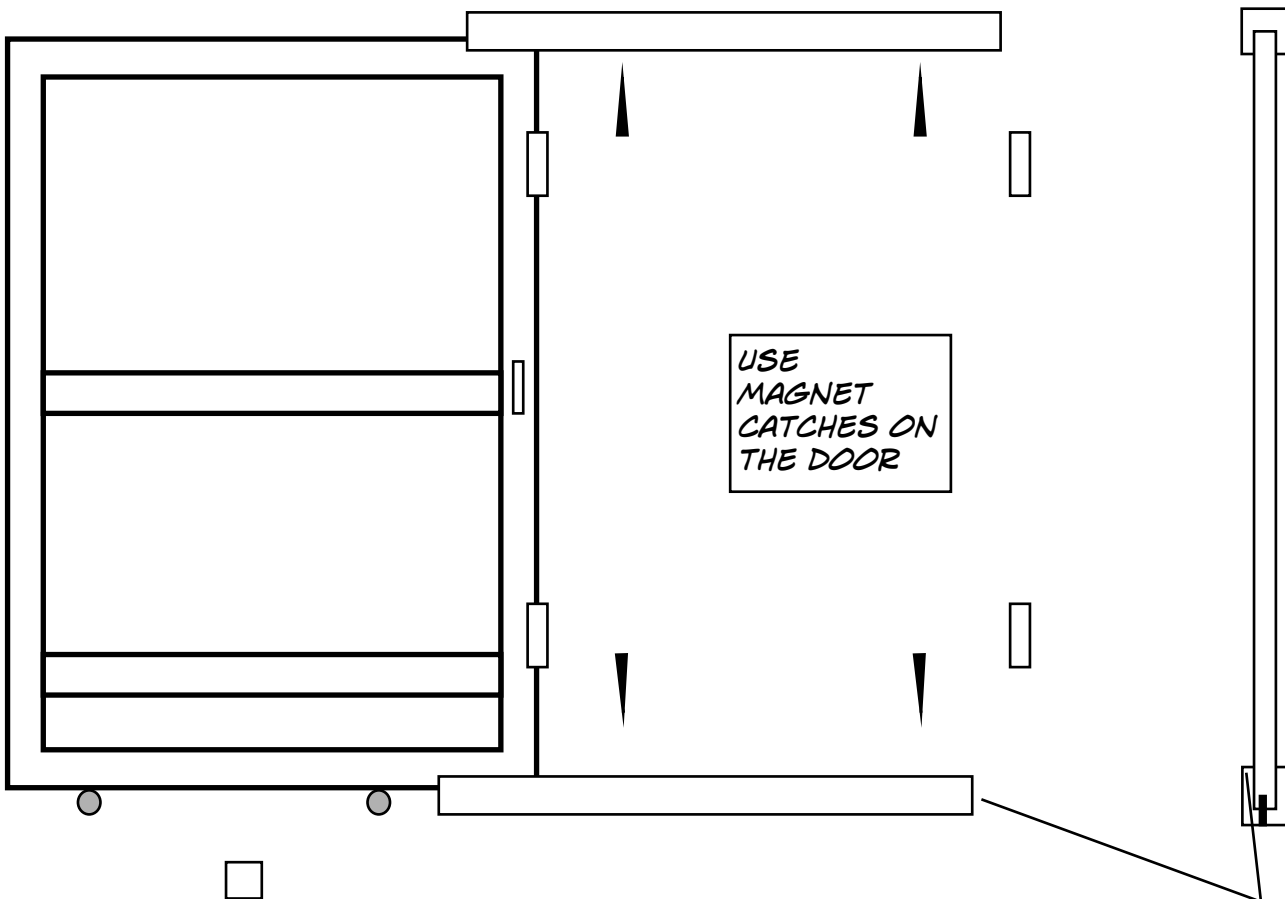

USE  
MAGNET  
CATCHES ON  
THE DOOR

YOU CAN GLUE  
EXTRA BRUSH  
ON EITHER  
SIDE OF THE  
CHANNEL TOP  
AND BOTTOM

MAY NEED AN END STOP, AT  
EITHER OR BOTH ENDS  
EITHER A SIMPLE BOLT  
THROUGH THE CHANNEL AND/  
OR A SECTION OF THE  
CHANNEL, BOLTED OR GLUED  
IN PLACE. HOWEVER IT IS  
POSSIBLE TO USE MAGNET,  
SO ONE AT EITHER END.

SECURE THE CHANNEL  
WITH COUNTERSUNK  
SCREWS INTO THE FLOOR  
AND CEILING, OR IF FACE  
FIXING DRILL A HOLE  
THROUGH THE SIDE OF  
THE CHANNEL AND INTO  
THE FRAME/WALL. DRILL  
THROUGH BOTH WALLS  
OF THE CHANNEL SO THAT  
YOU CAN SCREW THROUGH  
IT. USE A WHITE BLANK TO  
COVER THE HOLE.