


Sliding Panel Fitting Instructions

1. Measure the width of the door frame that you want to cover.
2. Assemble the Top Rod by placing them end to end and using the tube section to join them together to the length you need. You must cover the width of the open doorway and either the left or right hand side of where you want the screen to go.
3. Peel off the adhesive strip and stick one of the hook or loop across the length of the flat side of the sections. Then press the hook and loop tape together.
4. Either cut the Screen Rod to the required width, or leave it if you are happy for an overlap.
5. Separate the tube section at the back of the screen rod.
6. Measure the height of the doorway, or where you want the rod to be. Reduce the height by the width of the Top Rod (38mm).



7. Mark this measurement on each panel.
8. Lay the panels on the floor over the screen rod and push the dowel into the top rod trapping the panels working from the middle outwards to each end.
9. Insert the Screen Rod into the Top Rod and make sure it slides smoothly. The Top Rod thin side points upwards.
10. Hold the screen rod in place. It is unlikely you will get the overlaps and drop perfect first time! It will take patience.
11. Only once you are happy with the way the screen looks then peel off the adhesive strip on the tape and secure above the doorway. If you want to screw in place (there are no pre-drilled holes, drill through the ridges).
12. Leave the screen in place and only when you are satisfied with the overlaps and the way it touches the ground, cut the excess material at the top.

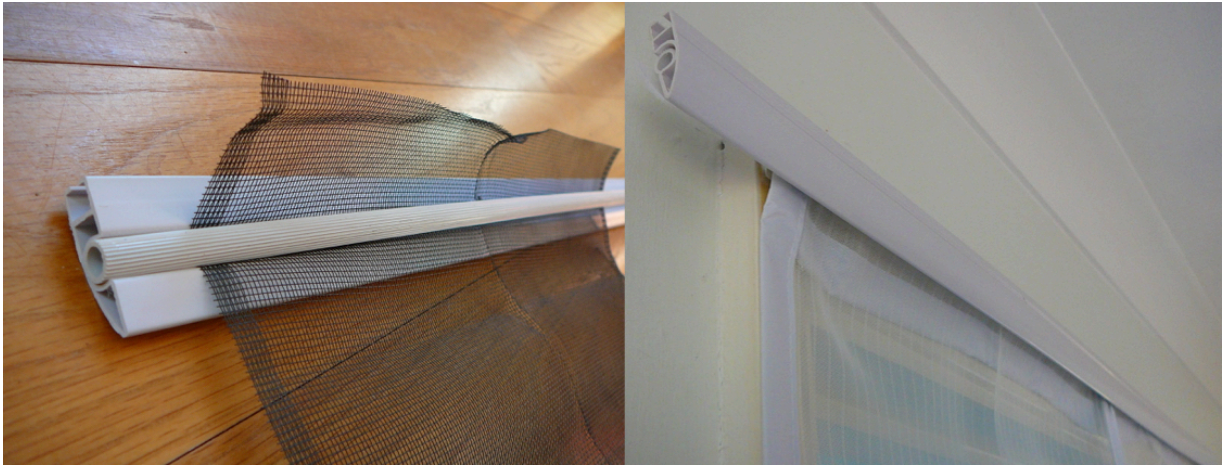