



# Contenido

Content | Contenu | Inhalt | Inclui

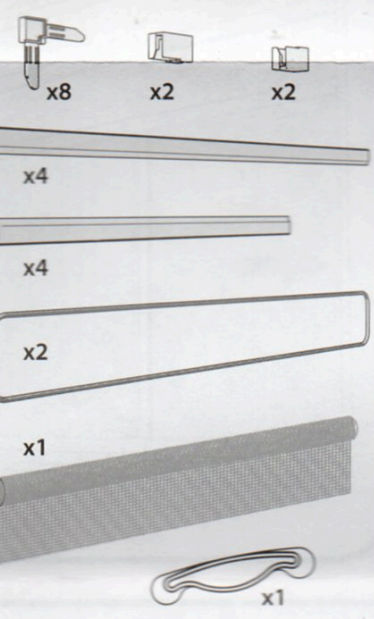

## Herramientas Necesarias

Tools needed | Outils nécessaires | Benötigtes Werkzeug | Ferramentas Necessárias

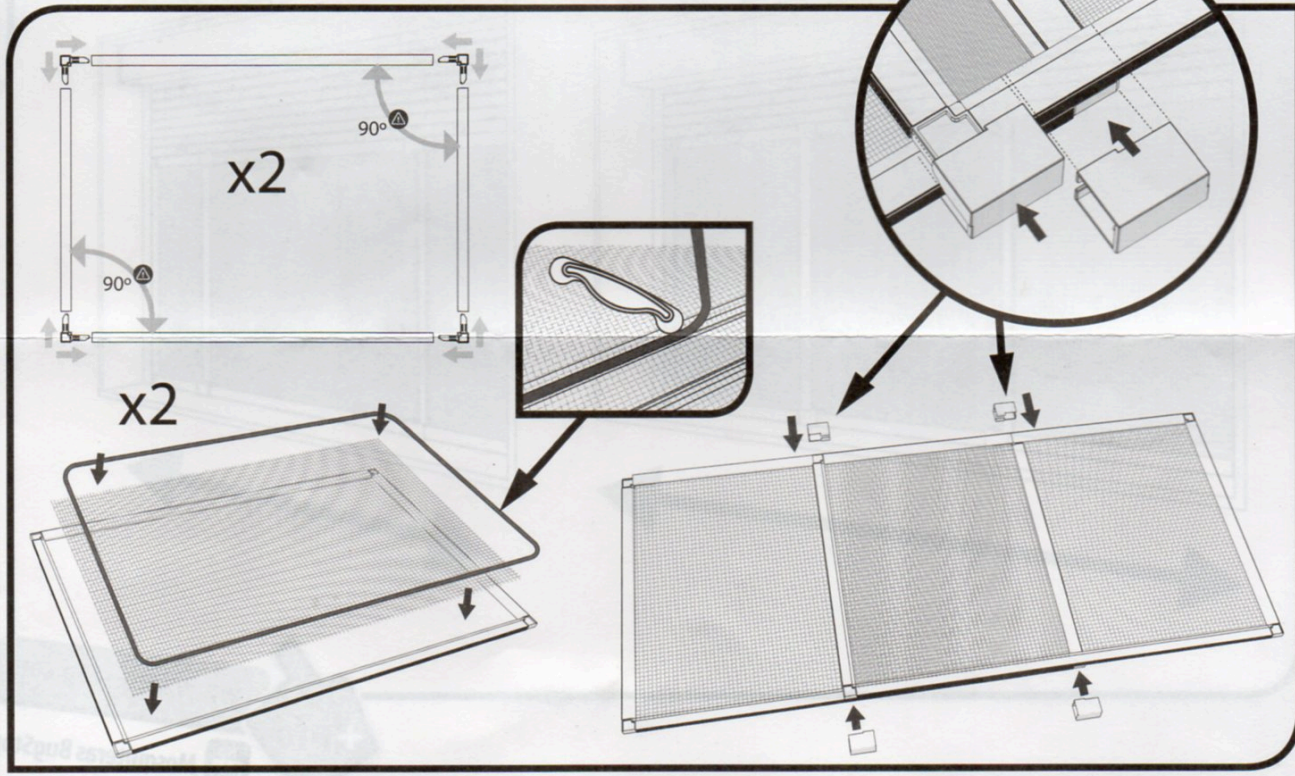


**Sash Assembly Tips** MAKE SURE THE FRAMES ARE FACING THE RIGHT WAY WITH ALL THE GROOVES ON THE SAME SIDE. THIS ALSO APPLIES TO THE CORNERS.

PUSH FIT ONE CORNER INTO THE SHORTER PROFILE. IT CAN BE TAPPED INTO PLACE WITH A RUBBER OR WOODEN Mallet, HOWEVER YOU CAN ALSO PUSH IT INTO PLACE ON THE FLOOR.

THEN INSERT THE BRUSH STRIP. CUT IT OFF AT THE END OF THE PROFILE THEN PUSH FIT THE OTHER THE OTHER CORNER.

ATTACH THE TWO LONGER PROFILES, THEN INSERT THE BRUSH STRIP. FINALLY ATTACH THE OPPOSITE SHORT PROFILE. YOU HAVE MADE A FRAME.

LAY THE MATERIAL OVER THE FRAME, MAKE SURE IT IS AT LEAST LEVEL AND OVERLAPS THE FRAME. INSERT THE RUBBER SPLINE ON EACH SIDE FIRST, THEN TOP AND BOTTOM USING THE SUPPLIED PUSHER TOOL, WORKING IN ONE DIRECTION. ONCE YOU ARE HAPPY WITH THE MATERIAL THEN CUT OFF THE EXCESS WITH A KNIFE. PLACE THE FRAMES TOGETHER, SPLINE SIDES TOGETHER, THEN PUSH FIT THE CLIPS WHICH ARE THE SAME WAY AROUND AT EITHER END.

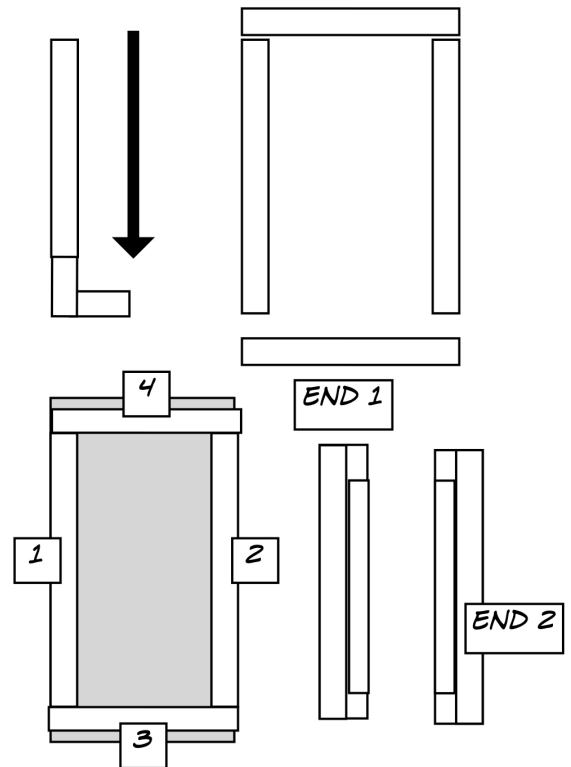

**Sash Assembly Tips** MAKE SURE THE FRAMES ARE FACING THE RIGHT WAY WITH ALL THE GROOVES ON THE SAME SIDE. THIS ALSO APPLIES TO THE CORNERS.

PUSH FIT ONE CORNER INTO THE SHORTER PROFILE. IT CAN BE TAPPED INTO PLACE WITH A RUBBER OR WOODEN Mallet, HOWEVER YOU CAN ALSO PUSH IT INTO PLACE ON THE FLOOR.

THEN INSERT THE BRUSH STRIP. CUT IT OFF AT THE END OF THE PROFILE THEN PUSH FIT THE OTHER THE OTHER CORNER.

ATTACH THE TWO LONGER PROFILES, THEN INSERT THE BRUSH STRIP. FINALLY ATTACH THE OPPOSITE SHORT PROFILE. YOU HAVE MADE A FRAME.

LAY THE MATERIAL OVER THE FRAME, MAKE SURE IT IS AT LEAST LEVEL AND OVERLAPS THE FRAME. INSERT THE RUBBER SPLINE ON EACH SIDE FIRST, THEN TOP AND BOTTOM USING THE SUPPLIED PUSHER TOOL, WORKING IN ONE DIRECTION. ONCE YOU ARE HAPPY WITH THE MATERIAL THEN CUT OFF THE EXCESS WITH A KNIFE. PLACE THE FRAMES TOGETHER, SPLINE SIDES TOGETHER, THEN PUSH FIT THE CLIPS WHICH ARE THE SAME WAY AROUND AT EITHER END.

