
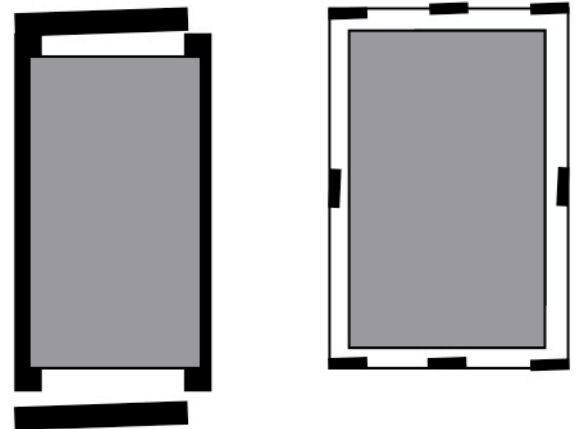


**BLACK FRAME
INSTRUCTIONS**

MEASURE YOUR
WINDOW FRAME ALLOW
FOR AN OVERLAP
EITHER SIDE

CUT YOUR FRAME PIECES
TO SIZE AND THE
FLYSCREEN MATERIAL SO
THAT IT SITS IN THE BLACK
FRAME

SECURE THE MATERIAL IN THE FRAME PIECES BY
FOLDING THEM OVER. YOU CAN APPLY HAND
PRESSURE BUT A MALLET IS EASIER AND QUICKER.

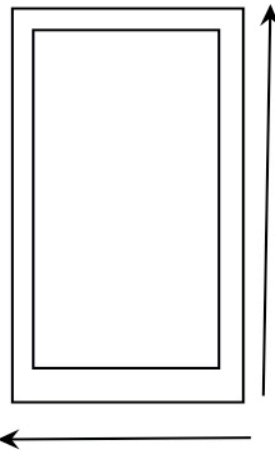

APPLY THE SELF ADHESIVE BLACK
HOOK AND LOOP PADS AROUND THE
FRAME PEEL OFF THE AND STICK
ON WINDOW FRAME.